




# **Manual Guide**

**Canon Mobile**

**Printer Setup Guide**


## Mobile printer Android

1. Go to “Play store”
2. Search for “Canon PRINT Business”

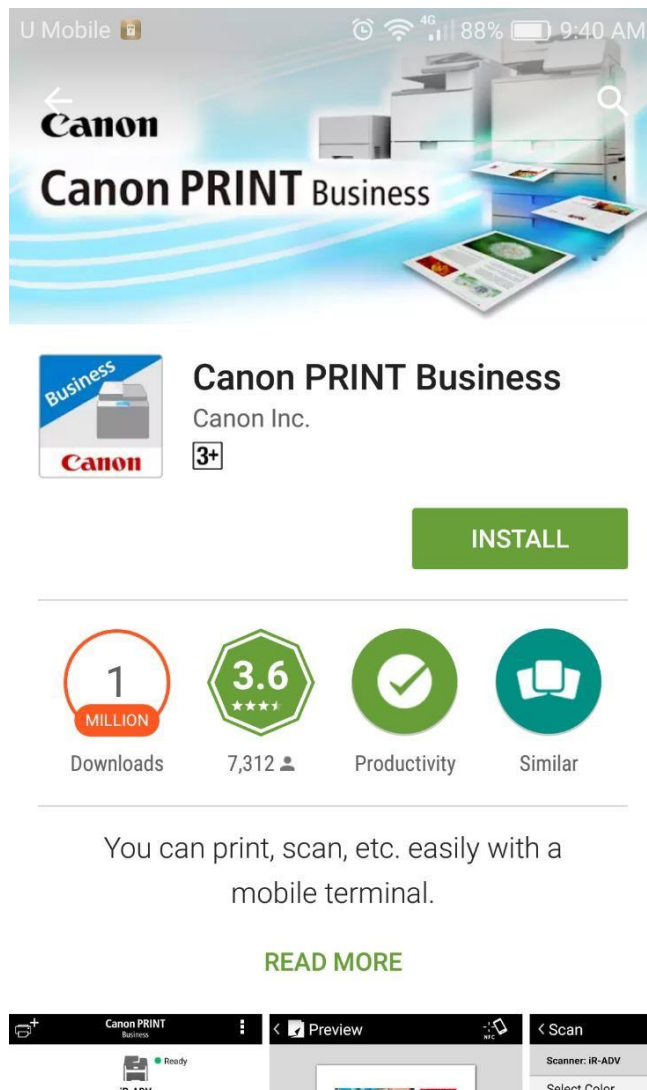

3. Press “download”

4. Run the “application”

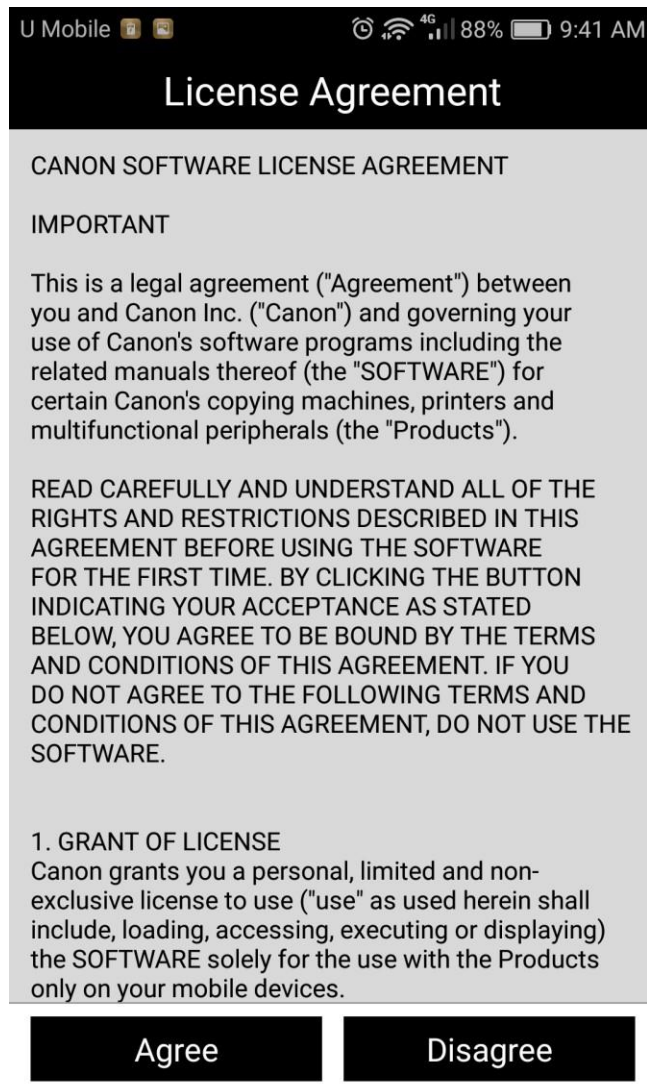


➤ Press “agree”


5. Press “add printer”




**No printer.**

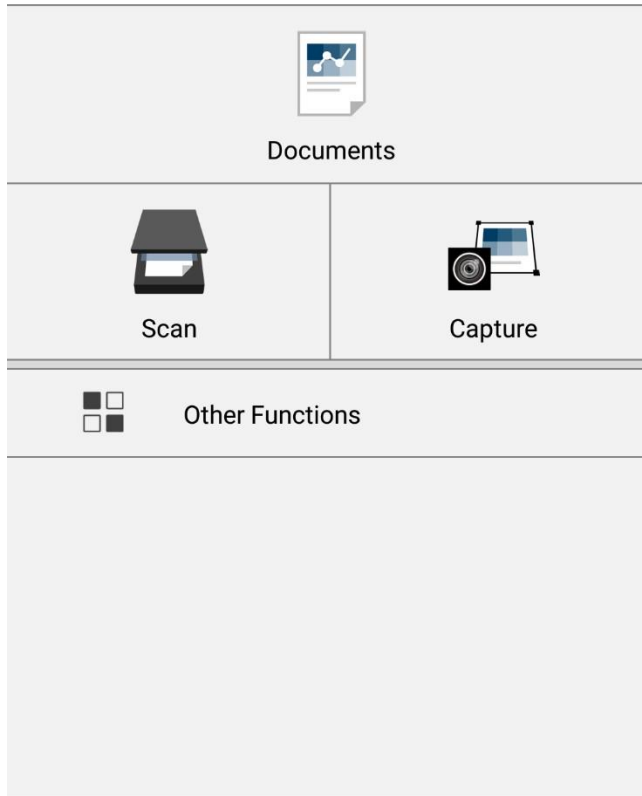


6. Select “Manual Search”

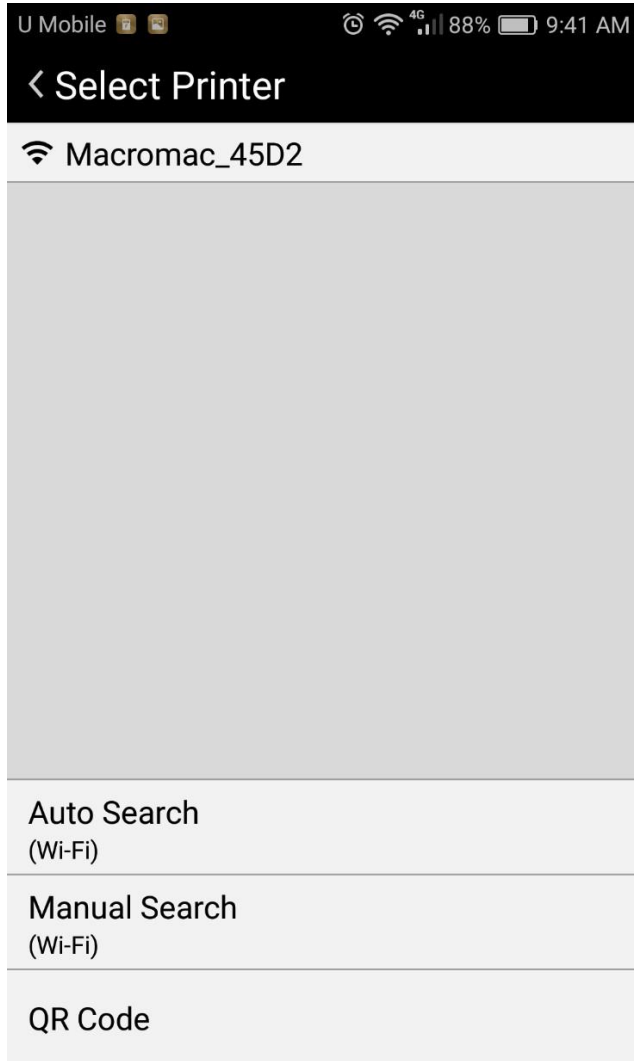


7. Enter your printer "IP Address"

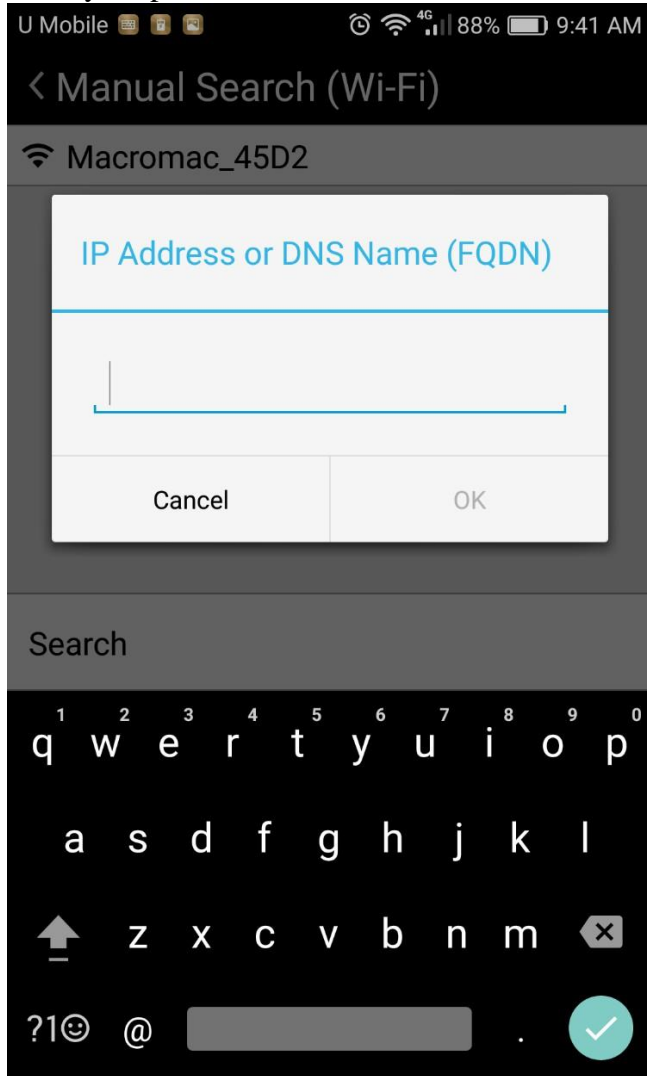


8. The printer name will appear at home page.
  - a. Documents – to choose a documents to print
  - b. Scan- direct scan from printer to your mobile
  - c. Capture- capture from your mobile device and print

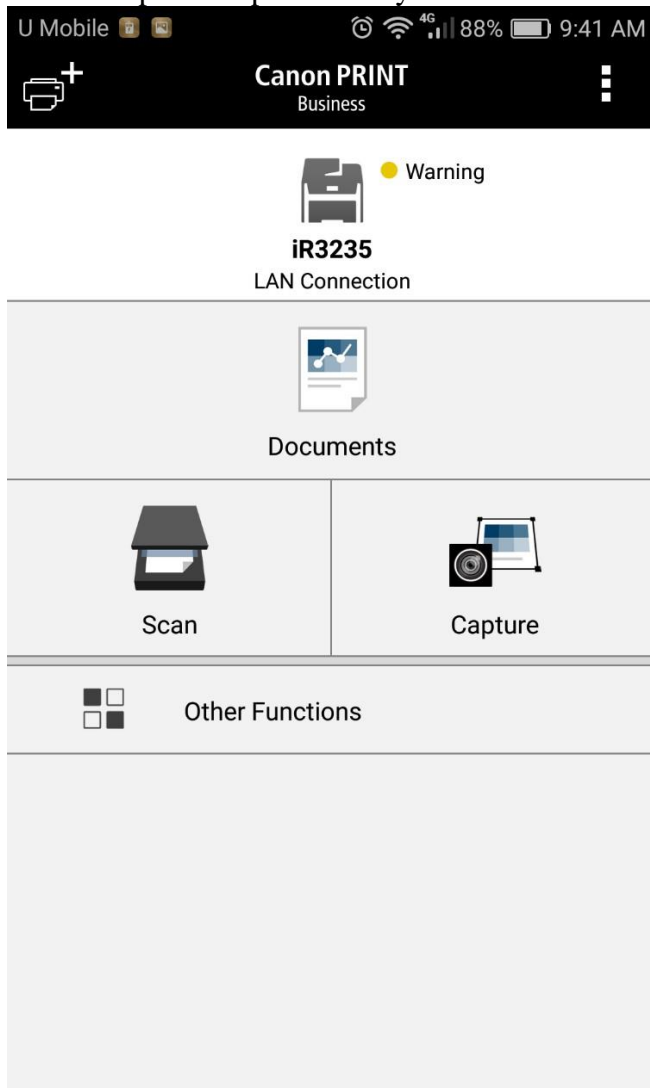


9. Select document from your device storage

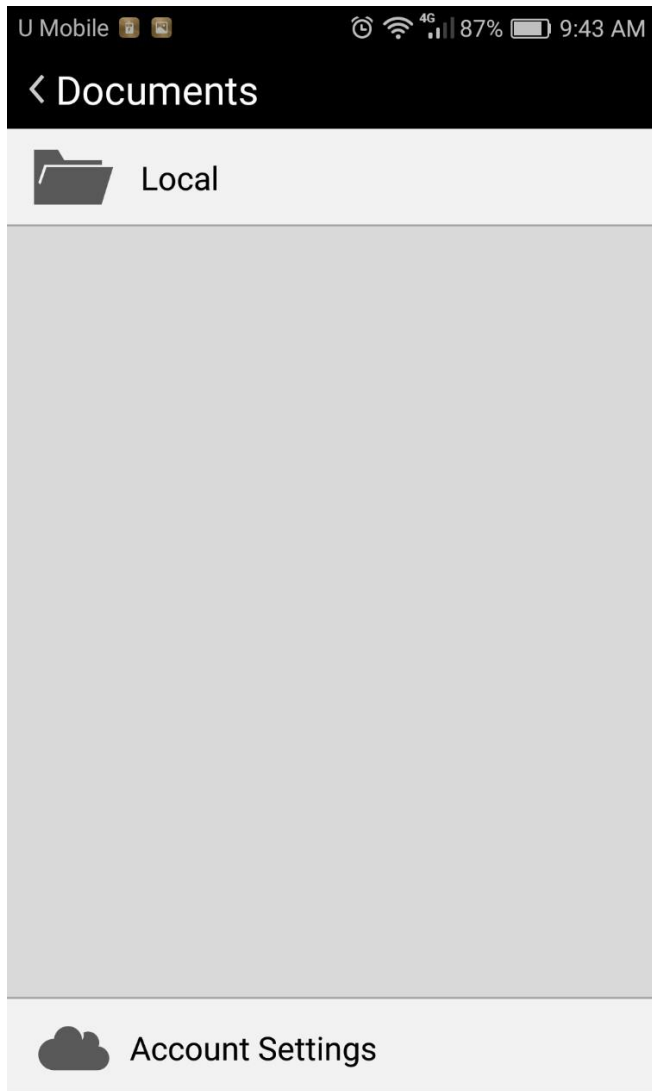

10. Tap to print preview the document

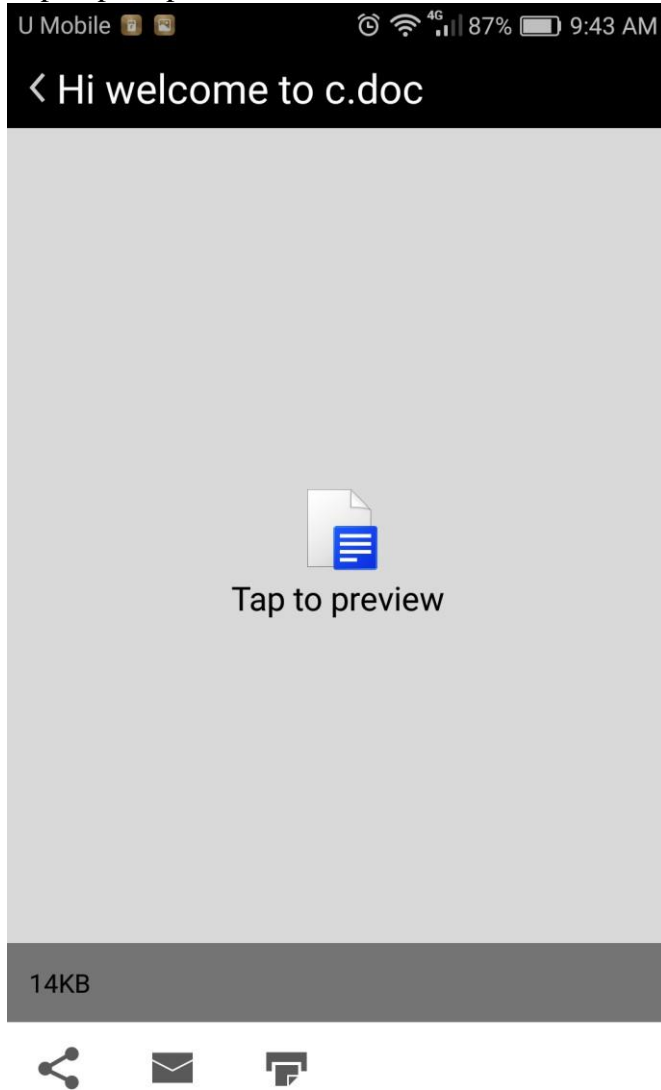


## 11. Print

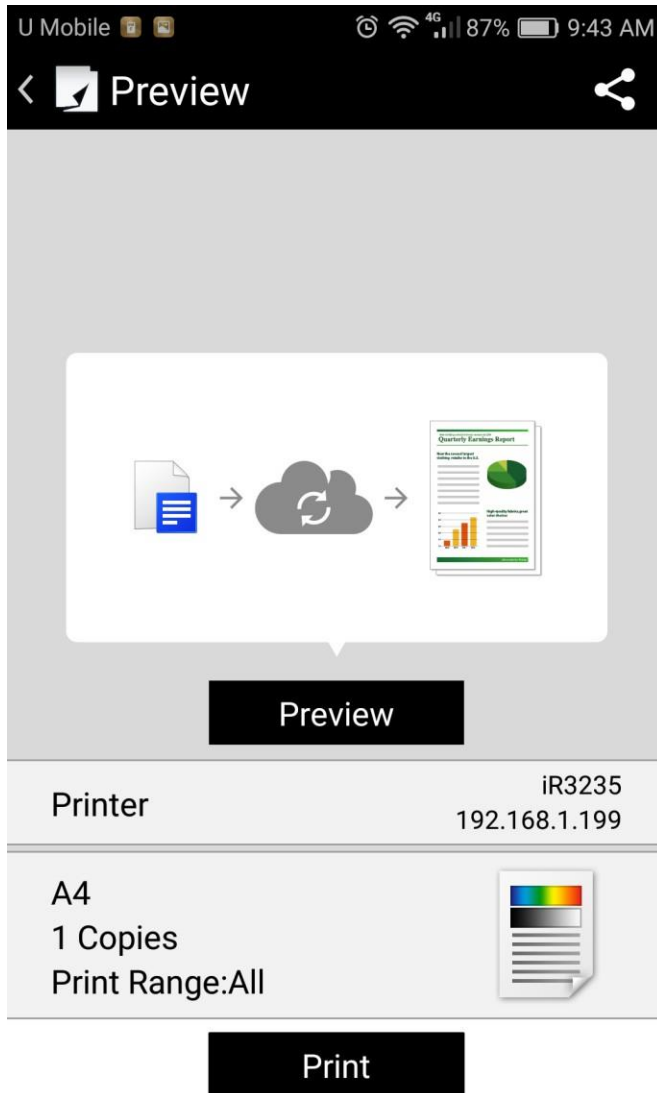

## Scan

1. Press "Scan"

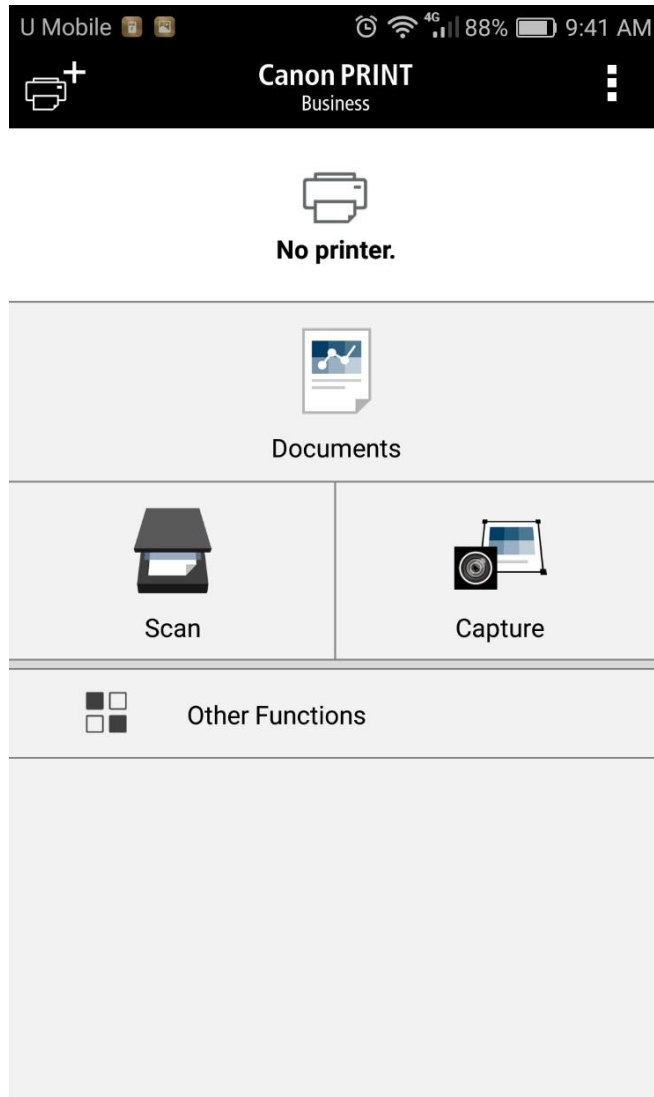

2. Printing will automatically save the scan document to device.

## Supported Scanning Devices

---

### **Supported Canon Color imageRUNNER ADVANCE multifunction devices: <sup>5</sup>**

- imageRUNNER ADVANCE C2020/C2030
- imageRUNNER ADVANCE C2225/C2230
- imageRUNNER ADVANCE C350iF/C250iF
- imageRUNNER ADVANCE C3330i/C3325i
- imageRUNNER ADVANCE C5051/C5045/C5035/C5030
- imageRUNNER ADVANCE C5255/5250/5240/5235
- imageRUNNER ADVANCE C7065/C7055
- imageRUNNER ADVANCE C7270/C7260
- imageRUNNER ADVANCE C9075 PRO/C9065 PRO
- imageRUNNER ADVANCE C9280 PRO/C9270 PRO

### **Supported Canon Monochrome imageRUNNER ADVANCE multifunction devices: <sup>5</sup>**

- imageRUNNER ADVANCE 500iF/400iF
- imageRUNNER ADVANCE 4051/4045/4035/4025
- imageRUNNER ADVANCE 4251/4245/4235/4225
- imageRUNNER ADVANCE 6075/6065/6055
- imageRUNNER ADVANCE 6275/6265/6255
- imageRUNNER ADVANCE 8105/8095/8085
- imageRUNNER ADVANCE 8205/8295/8285

### **Supported Canon Color imageRUNNER multifunction devices: <sup>5</sup>**

- Color imageRUNNER C5185i/C5185/C5180i/C5180
- Color imageRUNNER C4580i/C4580/C4080i/C4080
- Color imageRUNNER C3480i/C3480/C3380i/C3380
- Color imageRUNNER C3170U/C3170i
- Color imageRUNNER C3080i/C3080
- Color imageRUNNER C2880i/C2880
- Color imageRUNNER C2550
- imageRUNNER C6870U/C5870U
- imageRUNNER C5068/C5058
- imageRUNNER C1030/1030iF
- imageRUNNER C1022/C1022i

### **Supported Canon Monochrome imageRUNNER multifunction devices: <sup>5</sup>**

- imageRUNNER 7105/7095/7095P/7086
- imageRUNNER 5075/5065/5055
- imageRUNNER 5050N/5050

